
Assembly instruction

Soundwave: Stripes by Richard Hutten

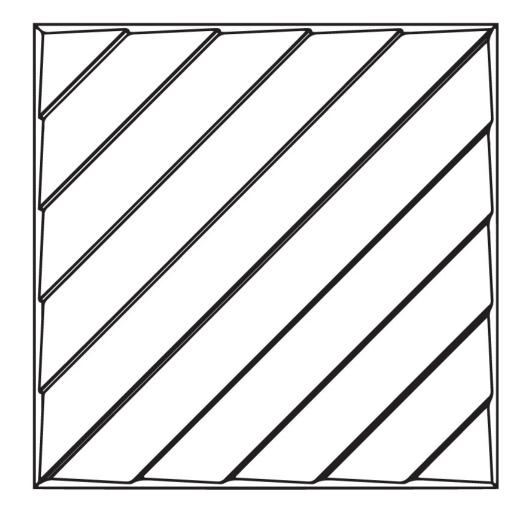


#### Parts in package. Quantities according to packing note.



#### Preparations before assembly

- All walls must be dry (at least 1 week from painting) and clean before assembling the Velcro. No wet or dry chemicals can be on wall surface.
- Walls towards outside are not recommended if they are wet and cold.
- Walls that are old and are effected with nicotine have to be carefully cleaned or repainted before assemble.
- The glue on the Velcro will be destroyed by silicon products, hand lotion etc. Do not touch the glue while assembling.
- For brick walls or very uneven walls a flat surface material must be attached before assembling. If the wall is uneven, a staple gun can be used. Staple the Velcro onto the wall, using two staples per Velcro attachment.
- Avoid high temperatures from lights or heating system which can cause the glue to melt.



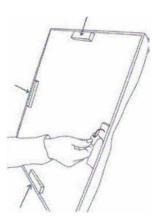


Read the assemble instructions (one in each box) and plan the installation before you start the installation to avoid to take down the Velcro and restart, this will destroy the glue on the Velcro. If this happens, it is possible to order new Velcro's.

Each panel has four Velcro attachments and it is very important that each point get under press while assemble, hold hand and press for min 10 seconds.

For optimal assembly we recommend to attach the Velcro separate on the wall and press them firmly before putting on the panels.


## Assemle first panel

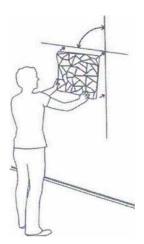

Start putting the first panel on the centre of a horizontal line, laser level pass is recommended to have a perfect installation.

4

# Check Velcro after assembling all panels

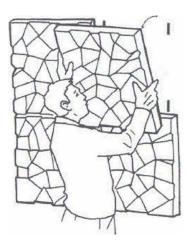

After putting all the panels to place, check that all Velcro attachments sticks to the wall, if not press a longer time for each point until it attach to the wall.

### Soundwave collection



